




# Canon PowerShot A630 Back Panel Replacement

You may want to replace the back panel of your camera if it becomes damaged. Removal of the back panel is also a prerequisite step for replacement of most internal parts. This guide will show you how to replace the back panel of your camera.

Written By: Alicia Burns

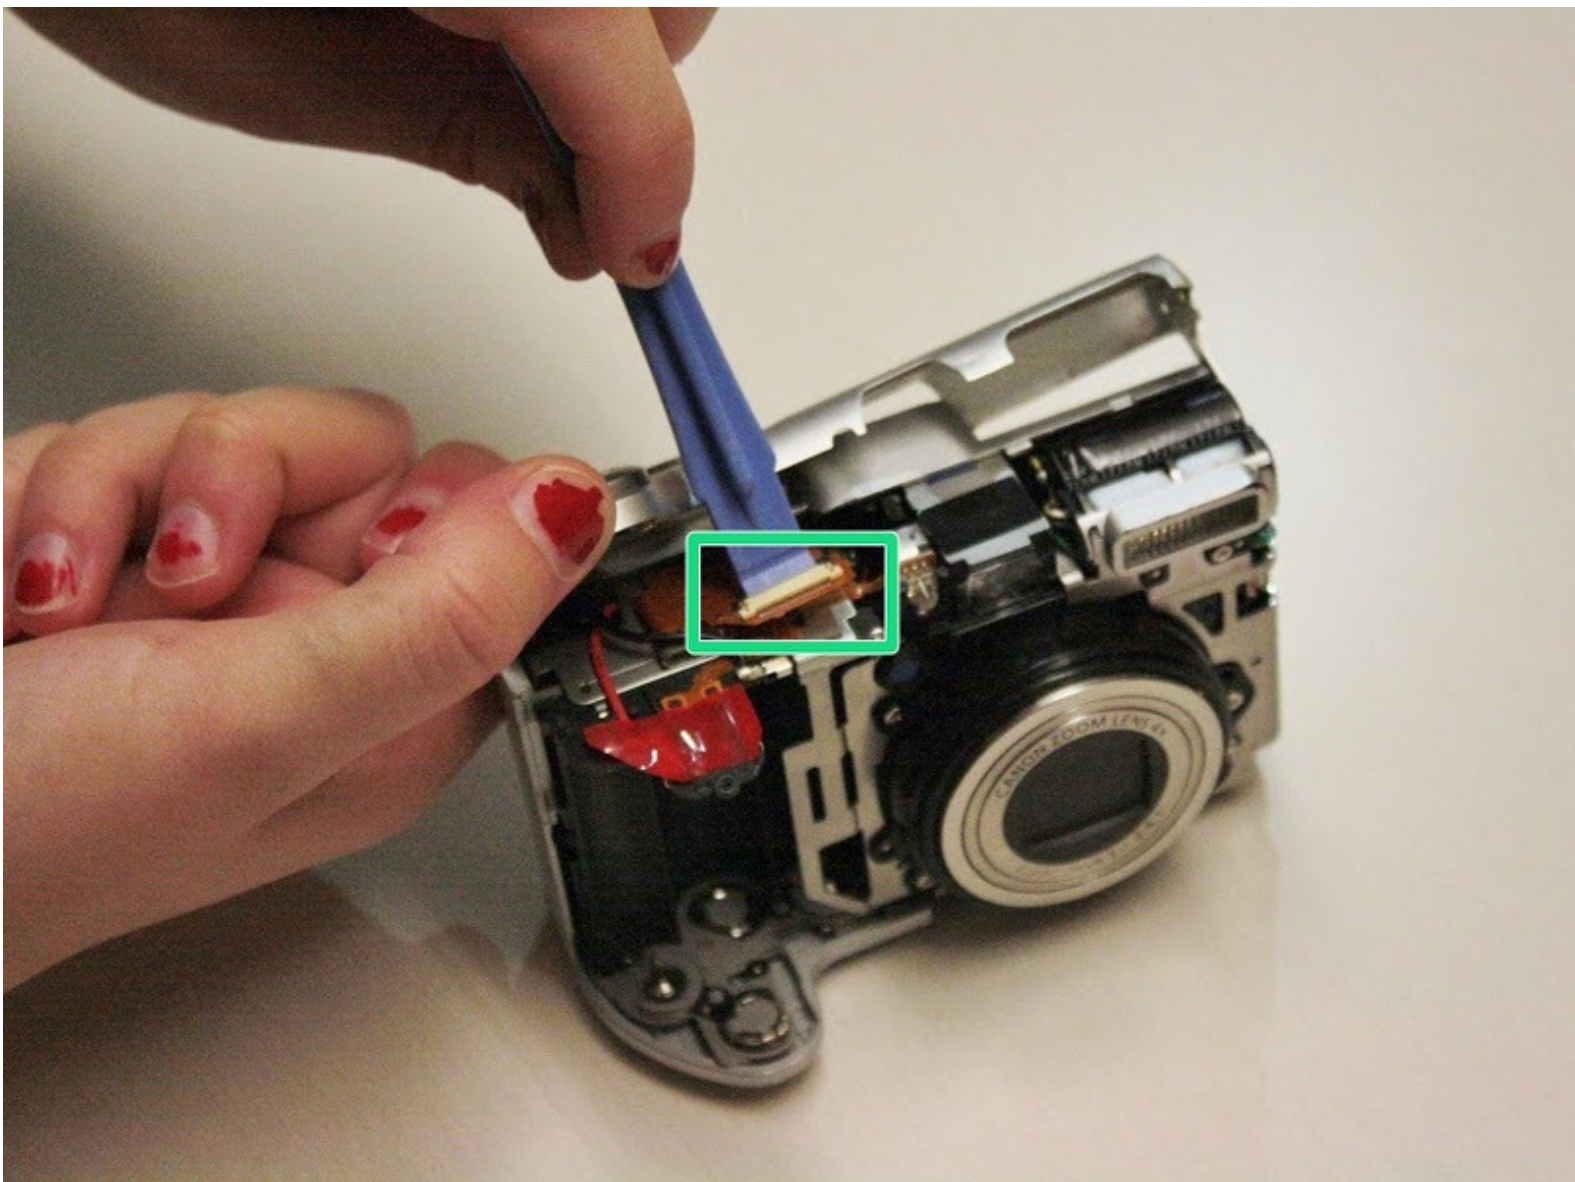




## TOOLS:



- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Panel

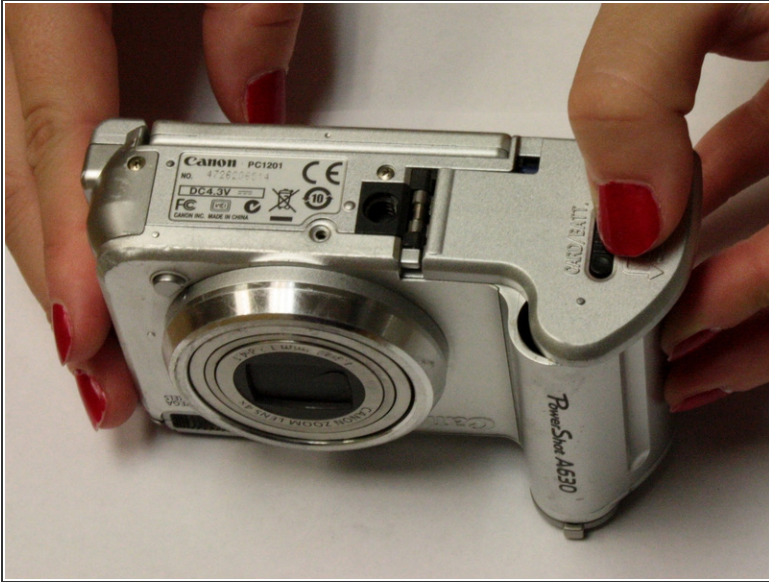

- Open the battery door by sliding the tab on the battery door while pushing the battery door away from the camera.
- Remove batteries.


## Step 2

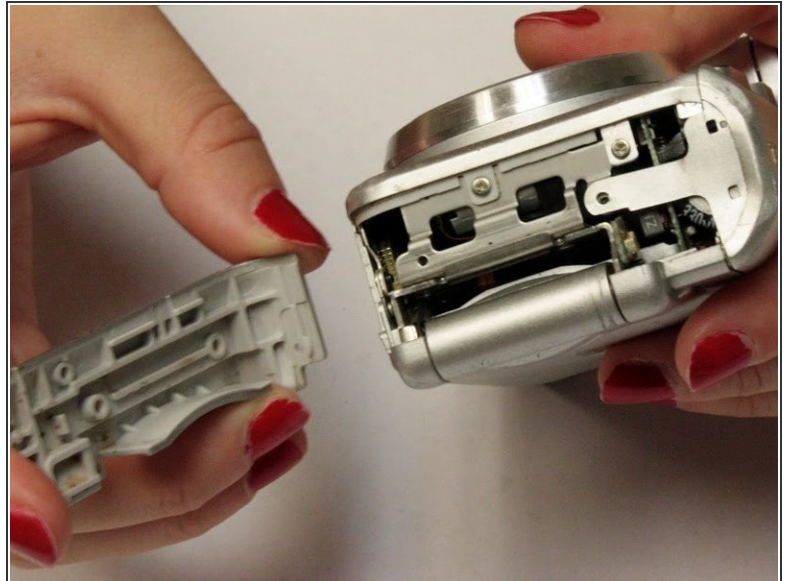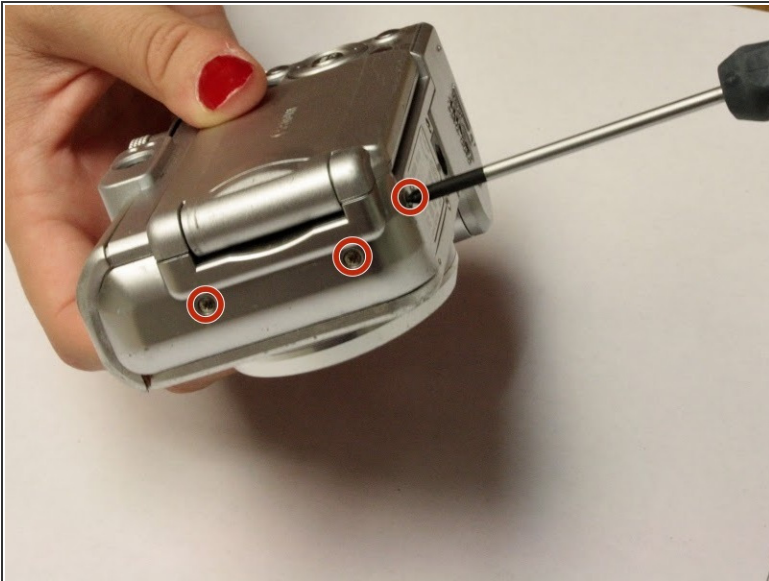

- Remove the three indicated .2mm screws using a Philips #00 screwdriver.
- Gently pull off side-panel to remove it.





### Step 3

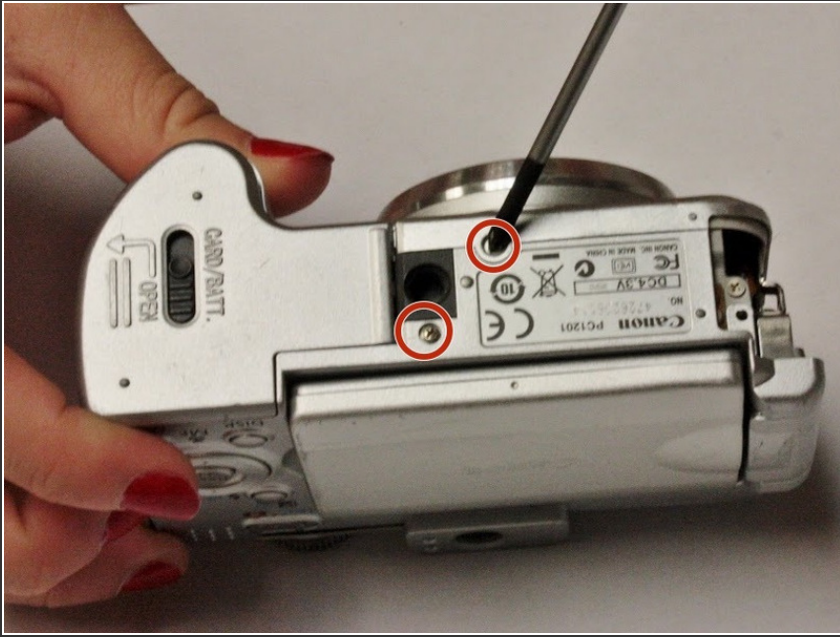

- Remove the two indicated .2mm screws using a Philips #00 screwdriver.

### Step 4

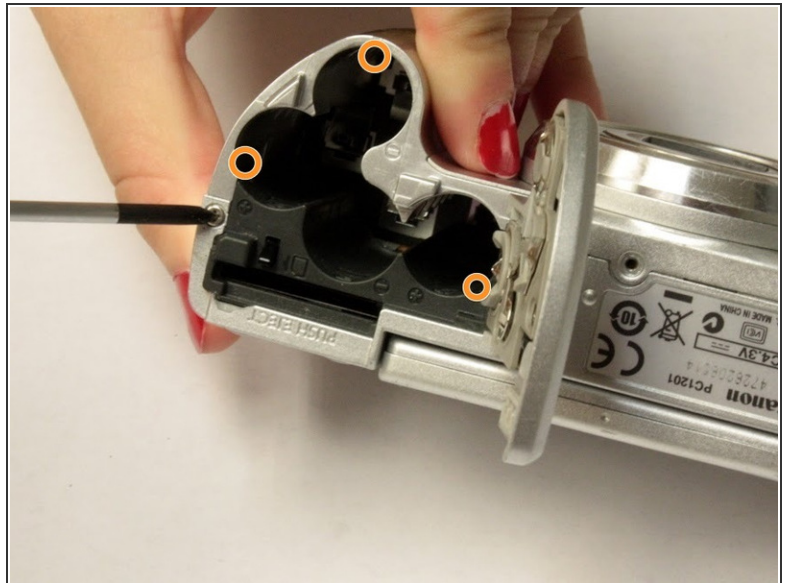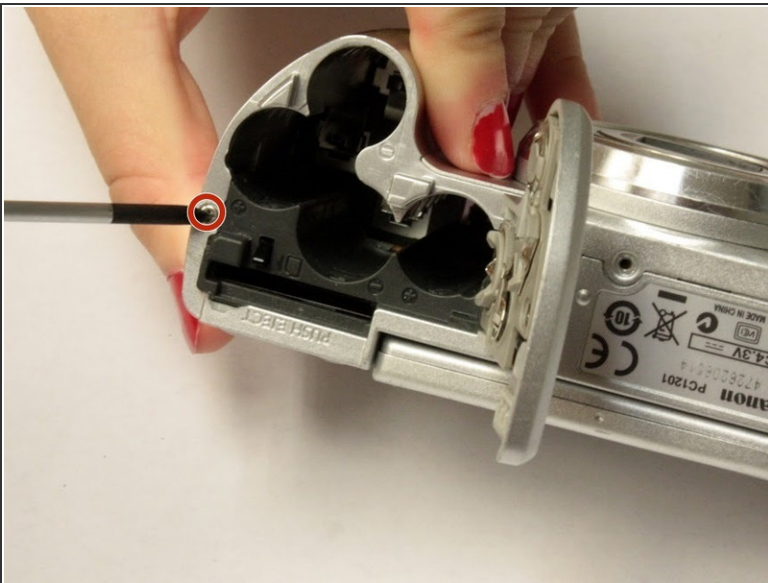


- Remove the indicated .2mm screw using a Philips #00 screwdriver.
- Remove the three .2mm screws located on the internal side of the top panel within the battery chamber using a Philips #00 screwdriver.

## Step 5




- Open 'DIGITAL A/V OUT' door on camera.
- Remove the two indicated .2mm screws using a Philips #00 screwdriver.

## Step 6

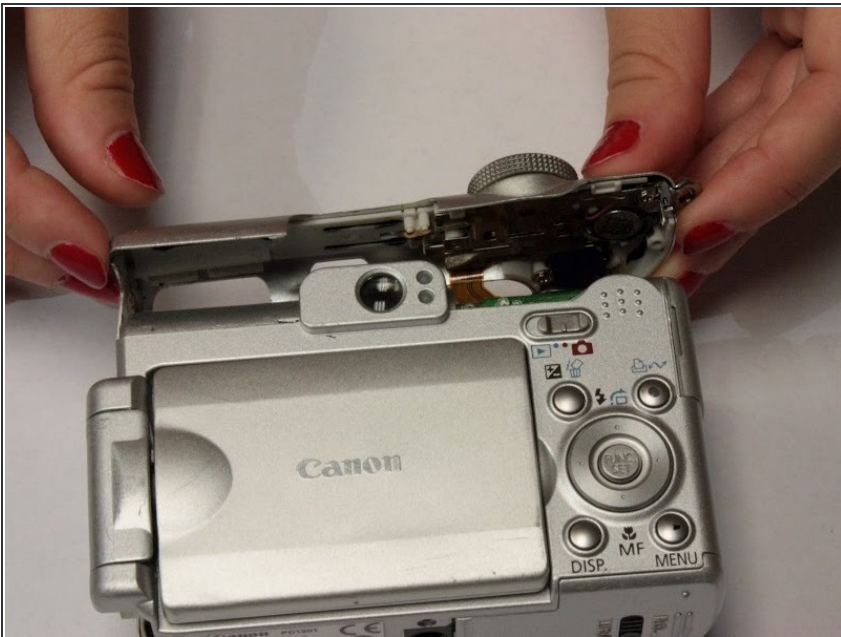

- Grip the sides of the top panel and gently pull to separate the top panel from the camera body.
- ⓘ The top panel will not completely detach.



## Step 7

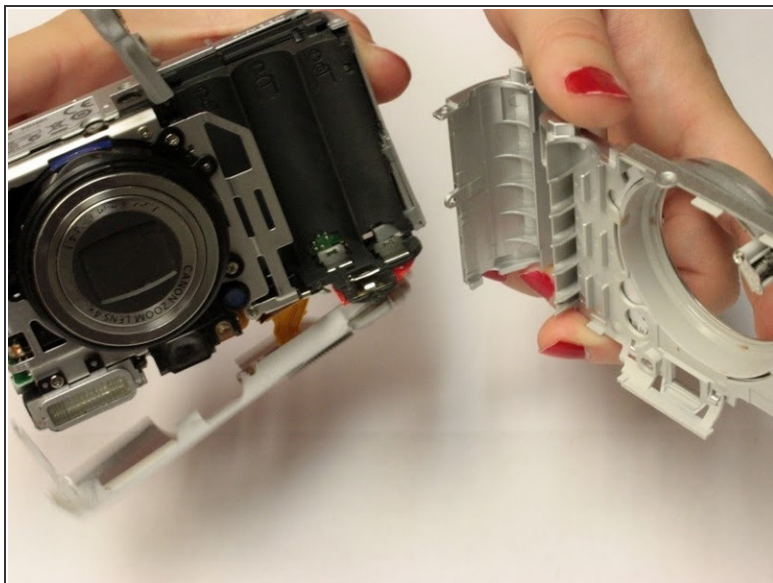

- Gently pull the front and back panels apart and use a Philips #00 screwdriver to remove the screw connecting the panels.
- Gripping the top and bottom, gently pull the front panel away from the camera body to remove it.



## Step 8 — Back Panel

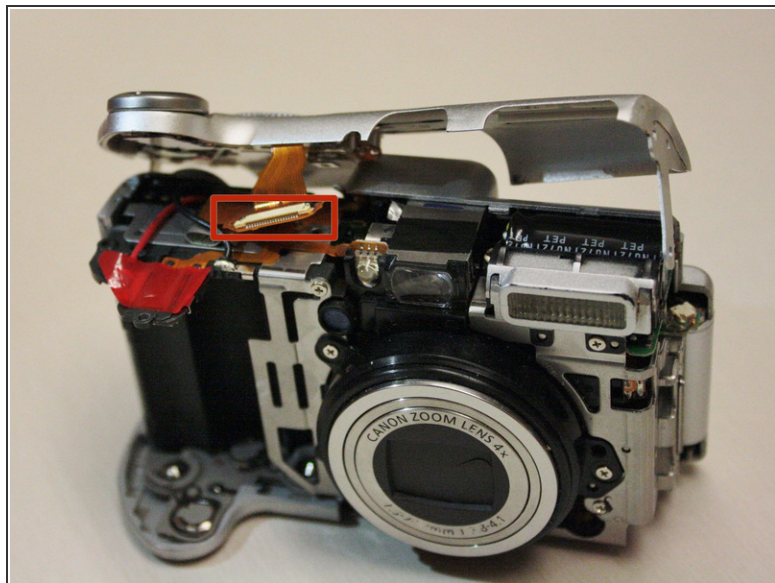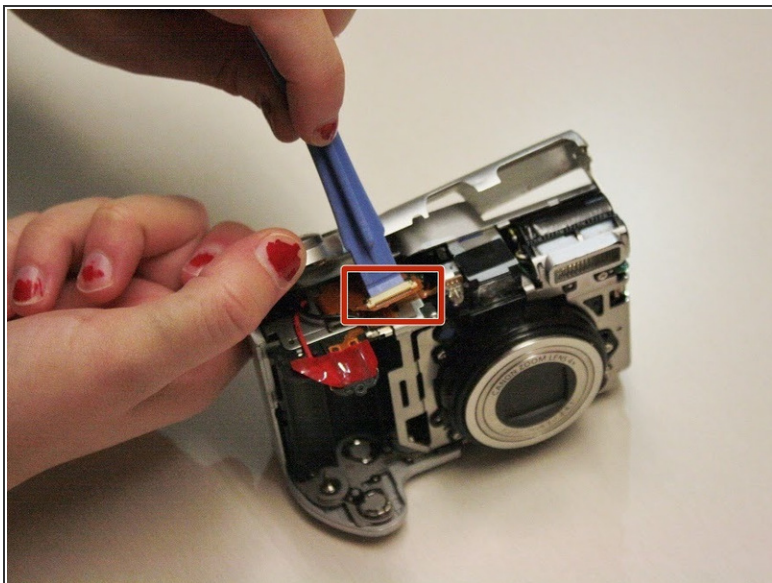


- Use the spudger to gently pull back the retaining clip and pull the ribbon out.

- The top panel should now be completely detached from the camera.

⚠ Applying too much force to the spudger may damage the retaining clip.

## Step 9

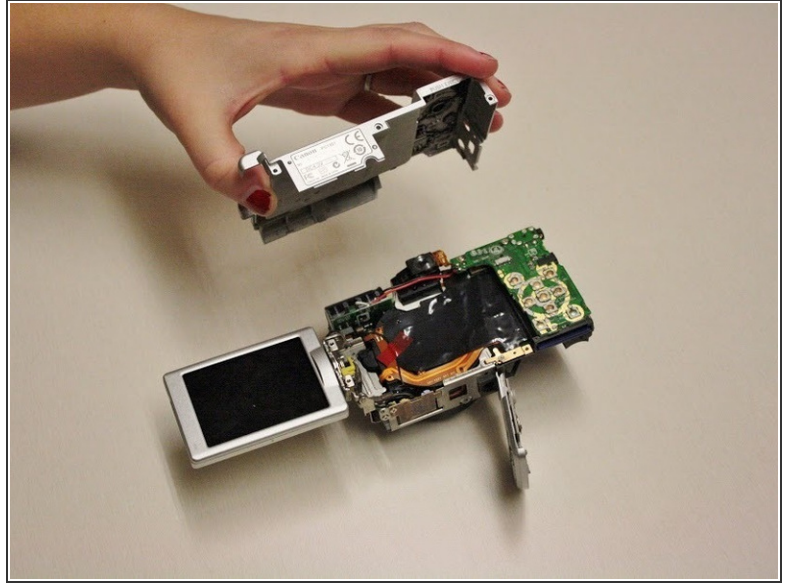

- Remove .2 mm screw using a #00 Philips screwdriver.
- Gently pry off back panel to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:23:17 AM.